


PROGRAMMING GUIDE AIR Control


1. AIR Control. (Control Remote)

The remote control has the following parts:

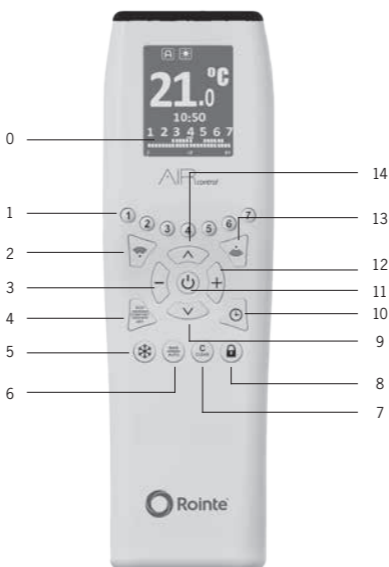


PARTS	INDICATION
0	TFT display
1	Days of the week (1 to 7) / Heating or water heating function selection
2	Submit data
3	Lower temperature
4	OFF - ECO - COMFORT - Start prog.
5	Anti-frost
6	MANUAL/AUTO
7	Erase programme
8	Lock
9	Back time
10	Adjust time
11	On/Off
12	Increase temperature
13	Receive data
14	Forward time


TFT display

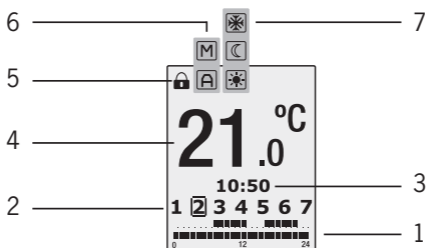

NUMBER	INDICATION
1	Times set
2	Days of the week (1 to 7)
3	Time
4	Temperature
5	Lock keypad
6	Manual/Automatic mode
7	Confort/Economic/Anti-frost mode


2. PROGRAMMING STEP BY STEP


1. Turn on the remote by pressing . When the remote is switched on will appear this imagen on the TFT display screen to select between room heating and water heating:

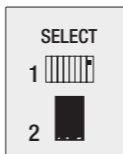

- » Press 1 on the keyboard ^①^②^③^④^⑤^⑥^⑦ to programme heating (radiators or towel rails).
- » Press 2 on the keyboard ^①^②^③^④^⑤^⑥^⑦ to programme water heaters.

PROGRAMMING GUIDE AIR Control

2. Before starting, please make sure that the time and date are correct, and the remote control is in Automatic function (indicated by the icon  on the screen).






3. By pressing , You will see Sel1, Sel2, Sel3,... the screen and the 7 days of the week will blink. Select the days you want to programme by pressing their corresponding keys from 1 to 7 (¹ ² ³ ⁴ ⁵ ⁶ ⁷):














- » Selected days will stop blinking.
- » Unselected days will keep blinking on the screen.

You can freely select one, all, or a selection of days to programme.

If you have to cancel the selection of any day, simply press its key, and it will blink again indicating that it has been deselected.

4. Pressing  you will access the dotted strip () that represents the hour by hour programme. You will see 0h, 1h, 2h,... on the screen and the first symbol () will blink. By pressing  or  you can move through the hours.




5. You can select one of the modes ECO, COMFORT or OFF for each hour you want to programme, following the next sequence (only one mode per hour is possible):

- » By pressing  once: ECO Mode (you will see  and a flashing , you can change the temperature by pressing  or .
- » By pressing  again: COMFORT Mode (you will see  and a flashing , you can change the temperature by pressing  or .
- » Pressing  one more time: OFF (no temperature appears on the screen, and a dot will appear bouncing up and down).




PLEASE NOTE: If you change a mode temperature, it changes it for all the hours with this mode set.



The range of temperatures of the ECO and COMFORT modes are different, depending on the type of programming you chose when turning on the remote control (heating or water heating):




Heating Selected


Icon	Mode	Range of temperatures
	COMFORT	20.0°C–30.0°C
	ECO	15.0°C–19.5°C
	ANTI-FROST	8.0°C


Water heating selected

Icon	Mode	Range of temperatures
	COMFORT	55.0°C–72.0°C
	ECO	40.0°C–54.5°C
	ANTI-FROST	8°C

Once you have chosen the desired mode and temperature for the current hour, move to the next you want to programme using  or . Repeat the previous sequence as many times as hours you wish to programme.

6. If you want to activate the ANTI-FROST Mode in the hours you set as OFF, press  (you will see  and 8.0° on the screen). To deactivate it, press .

7. Press  or wait 1 minute without pressing any key to exit the programming mode.

8. Send the programming to the desired radiator, towel rail or water heater by pressing  at a maximum range of 2m.

Remember this is only a quick programming guide. Please refer to the full manual for more detailed information about the AIR Control remote. Thank you.